

acquabella

Shower Trays





Duo Slate shower tray
Light Grey

Making it easy

- ✓ Precision engineered contouring featuring built in slope and drainage for perfect water dispersion and egress
- ✓ Installation options include recessed for full barrier-free solution or install directly onto floor
- ✓ Available in a range of sizes up to 66" x 36" with the benefit of on-site adaption / trimming
- ✓ No porous grout lines on the floor to degrade over time and allow water to seep through
- ✓ Easy to clean – harsh cleaning products not required



SHOWER DESIGN

Bringing the best of European design, Acquabella shower trays unlock exciting new possibilities in the American bathroom. Cast as a single piece from our award-winning Akron stone composite, in modern clean lines without the fuss of a tiled shower floor:

- Three distinctive collections featuring different drain formats and profiles
- Two specially designed, 100% consistent anti-slip surface textures
- Five beautiful color finishes

Textures




Beton




Slate

Colors



Snow White



Lotte



Light Grey



Dark Grey



Black



Hydrolisis resistant
water + moisture resistant



Detailed
High definition textures



Long lasting
resistant to thermal shock



Ergonomically safe
anti-slip texture built in



Durable
impact resistant



Easy clean
no need for harsh chemicals



Antibacterial
certified ISO 22196:2011



Silica free
can be safely trimmed




The collection with center & end-drain options



Akron color-matched grid included

Standard Color



Snow White

Optional Color



Latte



Light Grey



Dark Grey



Black

Textures




Beton




Slate


36x36

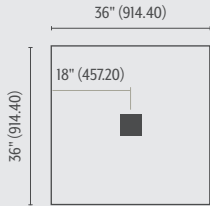



34x48

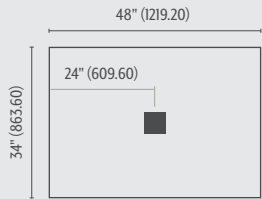



36x48

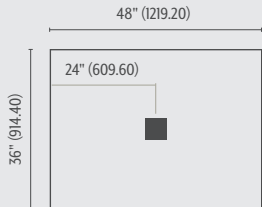



30x60

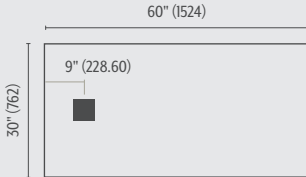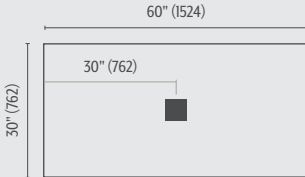



32x60

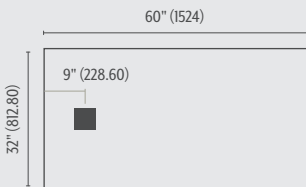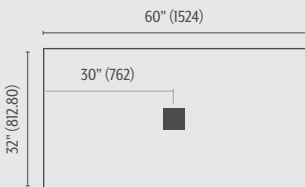


36x60

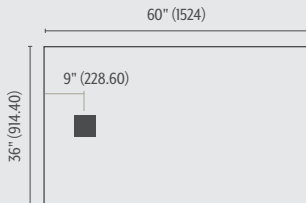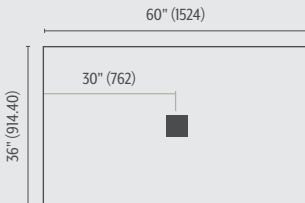

36x66

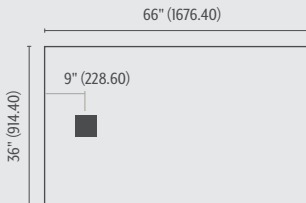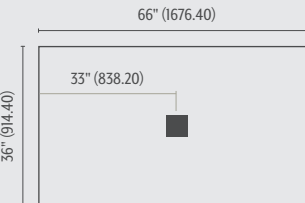


BASE
BETON / SLATE

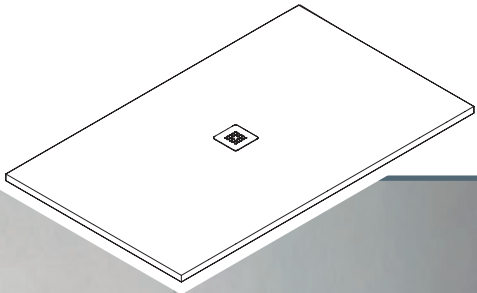

Did you know? Fresh for 2023, Base shower trays include a new cast drain cover. So whatever the color and texture finish you choose, there's a 100% matching look and feel beneath your feet. Perfection!

Fernando Maceda
NPD Manager

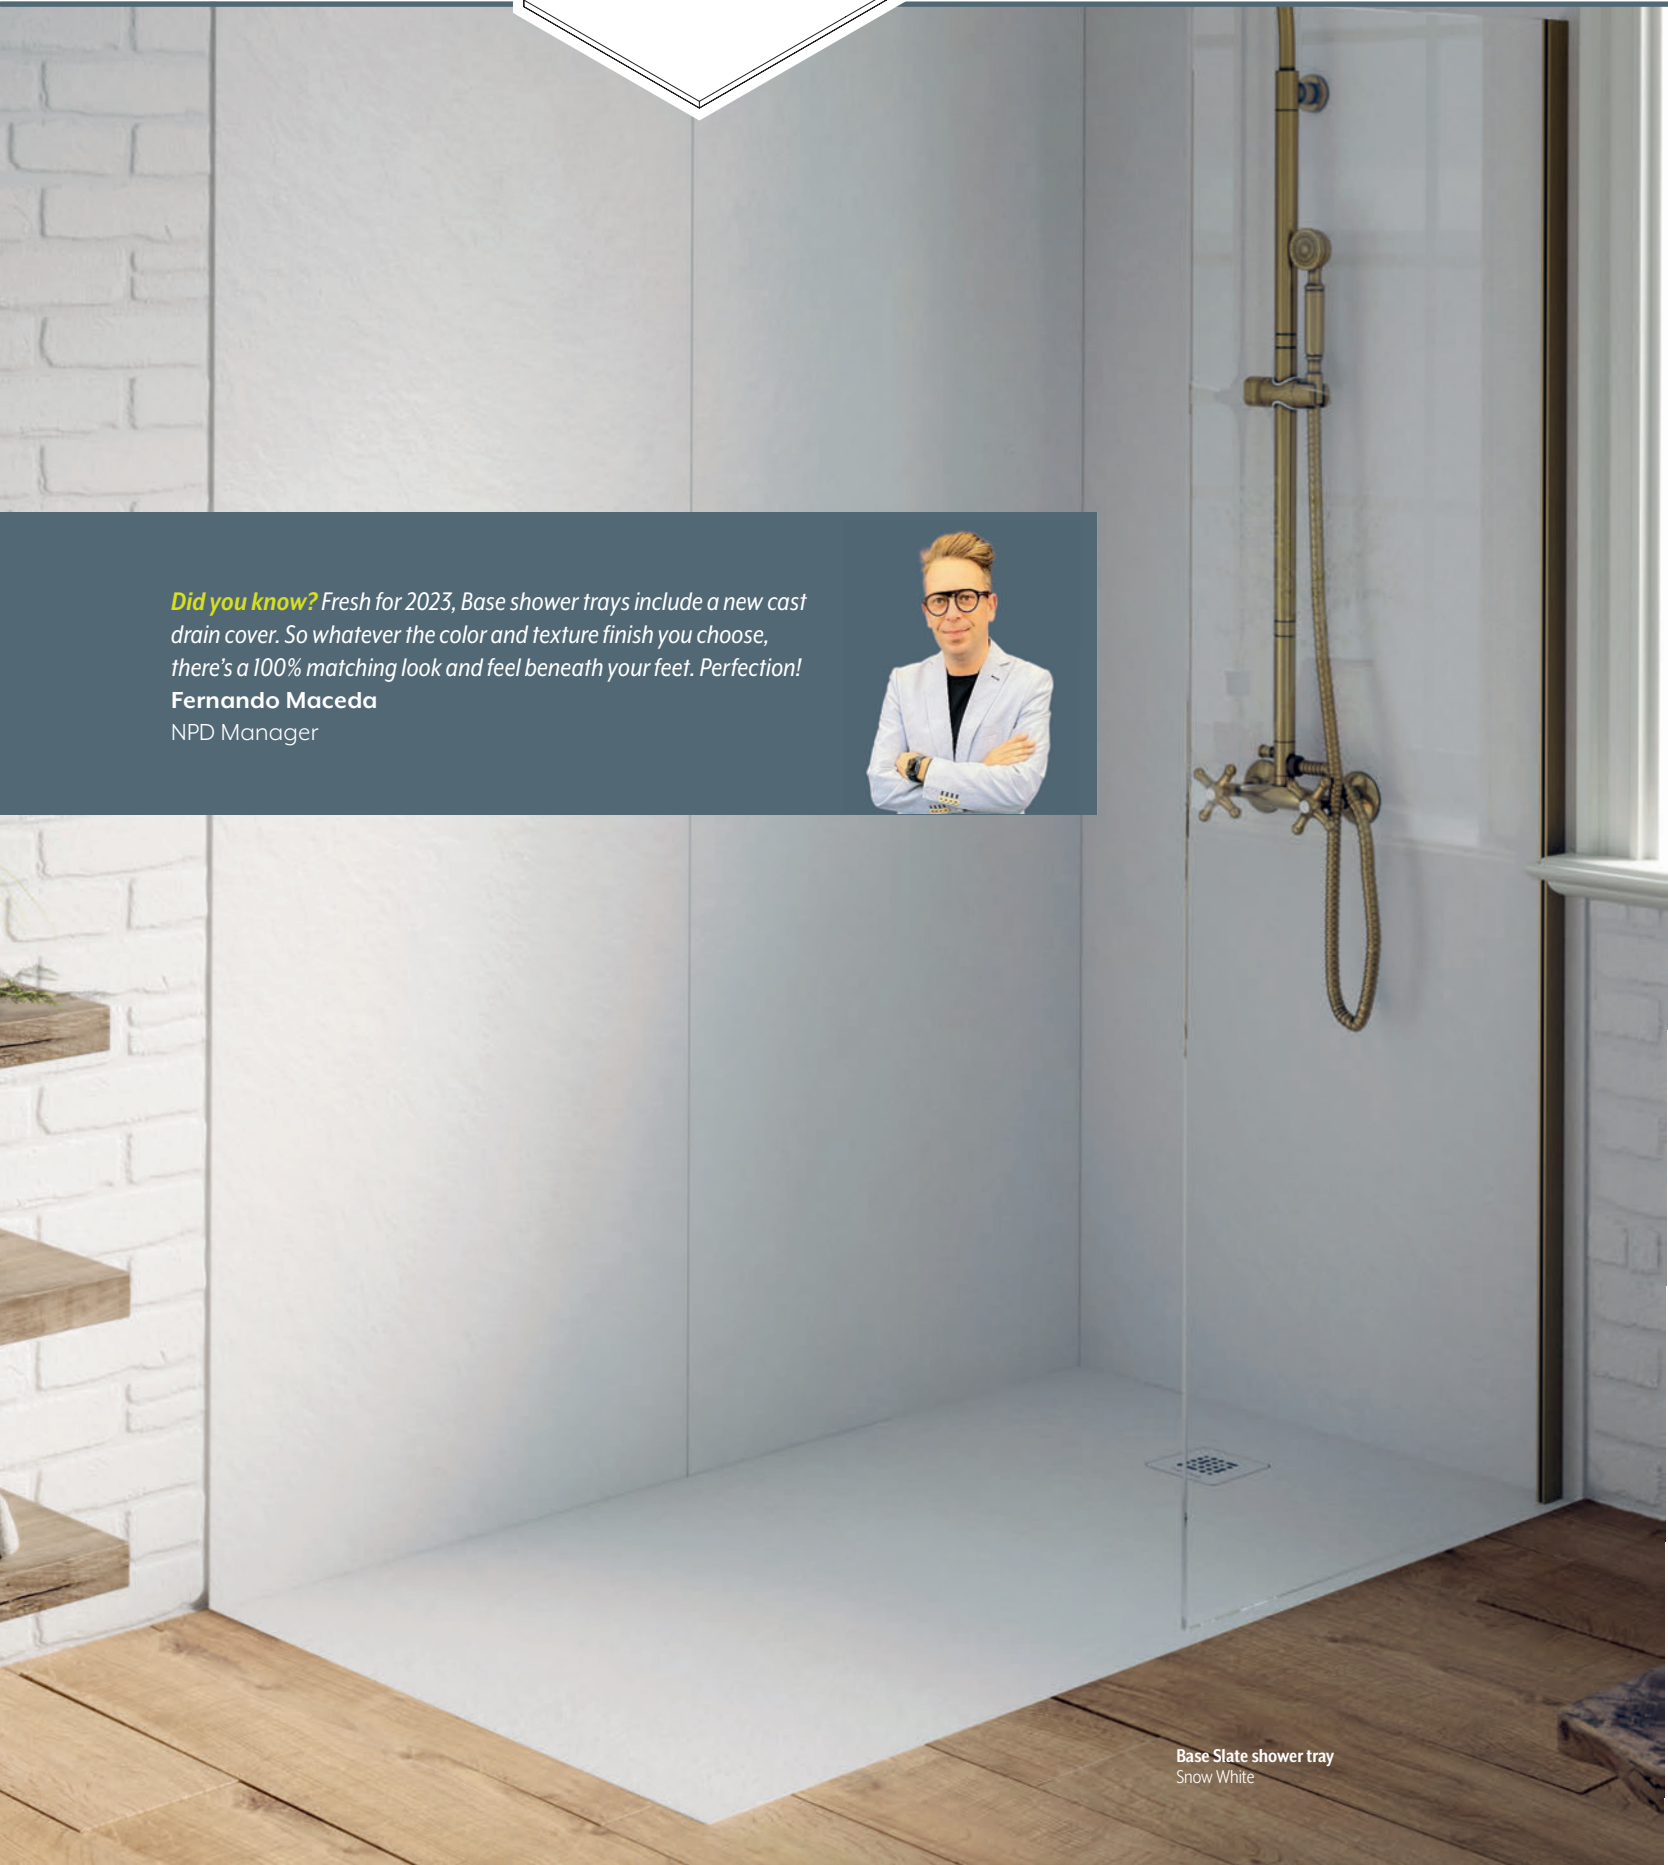

Base Slate shower tray
Snow White




The collection with
a drain on the short edge



Akron cover included

Standard Color



Snow White

Optional Color



Latte



Light Grey



Dark Grey



Black

Textures




Beton




Slate


36x36

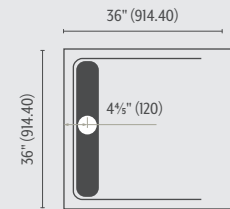


34x48

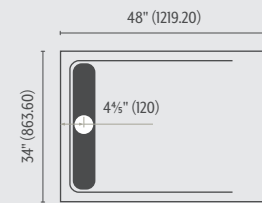


36x48

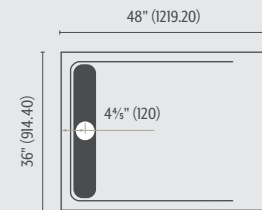


30x60

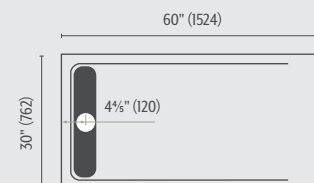

32x60

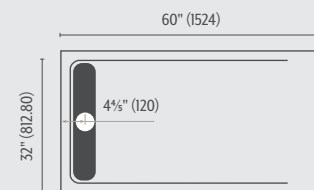


36x60

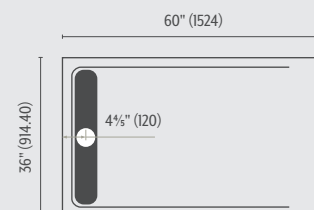

DUO

BETON / SLATE

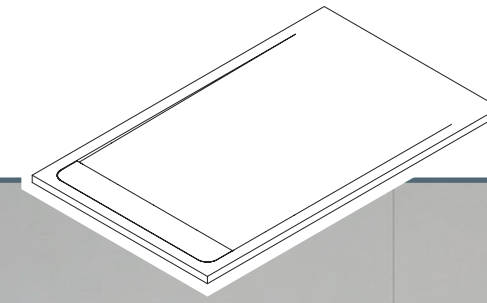

Love the idea of barrier-free wetroom but hate black mold associated with tiles and grout? That's where our extensive selection of shower trays, ranging from small through to large formats, really offer the best of both worlds – no grout lines on the floor to clean and the ability to install 100% barrier-free, thanks to the clever contoured casting of each tray. Which of the five colors and two anti-slip textures will you choose?

Eric Phelps

Acquabella US President



Duo Slate shower tray
Latte



The collection with
a drain on the long edge


LARGO

BETON / SLATE



Akron cover included

Standard Color



Snow White

Optional Color



Latte



Light Grey



Dark Grey



Black

Textures




Beton




Slate


36x36

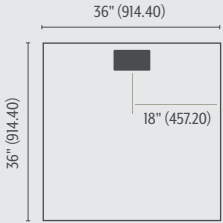


30x60

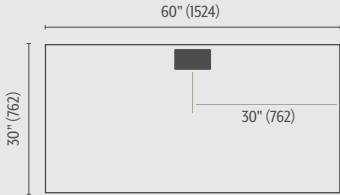



32x60

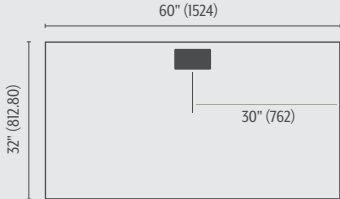

36x60

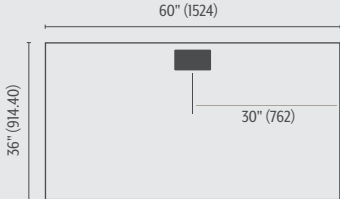

36x66

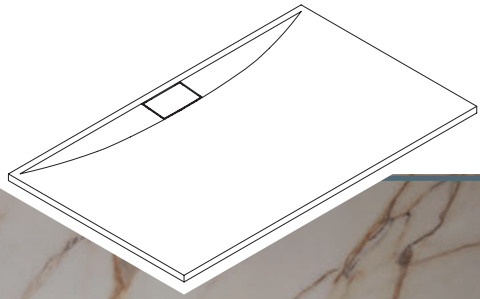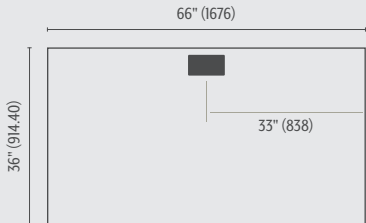

Largo Slate shower tray
Snow White

Since our mental, inner peace revolves not only around functionality and aesthetics, but also sensual impressions, the materials should be also pleasant to the touch. Only all these combined elements ensure our well-being and comfort.


Juan Luna
Design Manager



INSTALLATION DETAILS




Flange detail

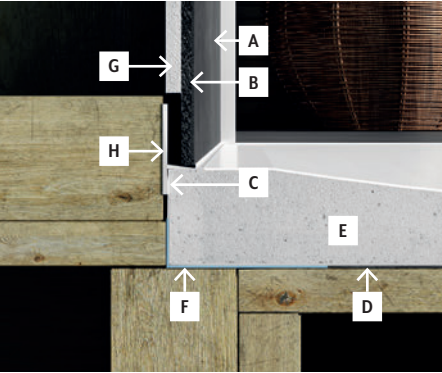


- A Flange detail
- B Tile adhesive
- C Silicone
- D Adhesive
- E Shower base
- F Waterproof membrane
- G Drywall
- H Flange

Floor installation

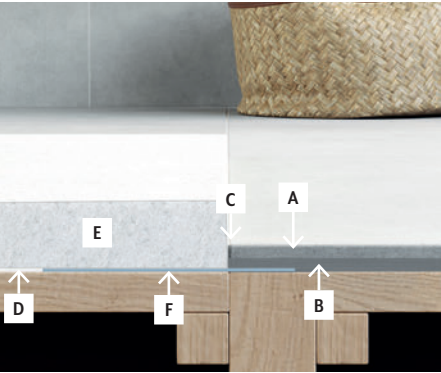

- A Flange detail
- B Tile adhesive
- C Silicone
- D Adhesive
- E Shower base
- F Waterproof membrane

Recessed floor installation

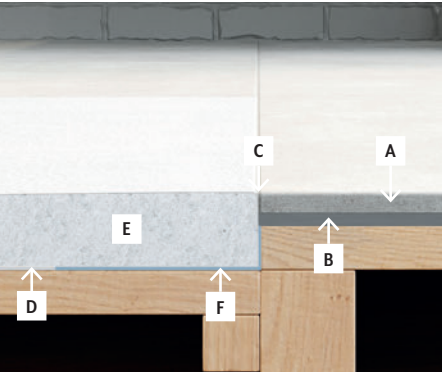

- A Flange detail
- B Tile adhesive
- C Silicone
- D Adhesive
- E Shower base
- F Waterproof membrane

USE AND MAINTENANCE

To enjoy your product for many years to come, follow these simple tips:

1. For regular cleaning, we recommend universal, non-abrasive cleaning products.
2. After each use, rinse the inner surface with water and dry with a cotton cloth. Do not use synthetic or microfibre cloths as they may scratch the surface.
3. To remove limescale, use vinegar diluted with water.
4. Clean stubborn stains with warm water and mild detergents or soapy water. For specific cases (such as hair dye or nail polish) use nail polish remover or acetone. Finally, rinse thoroughly with water.

ATTENTION:

We recommend using a green pad (Scotch Brite or similar) or an abrasive sponge only in the case of superficial scratches or persistent stains.

Do not use it over the logo.

REPAIR

This kit can be used to repair damage and scratches. We recommend that it is applied by a professional. The kit contains all the components required to carry out the repair and to guarantee professional quality and finish.

Preparation of the area to be repaired:

1. Remove loose debris from the damaged surface with the help of a cutter or sharp tool. Apply burning alcohol to remove any loose powder, using a cotton cloth that does not leave any lint.
2. The surface must be completely clean and dry.
3. Protect the perimeter area of the damaged section with masking tape.

Directions for use:

1. Protect your hands with gloves and wear a mask.
2. Pour canister B (Pipette) into canister A and stir with the spatula for about 30 seconds until everything is well mixed.
3. Apply the mix immediately to the damaged surface using the spatula. You must apply excess material, leaving more than enough. Leave to dry for at least 6 hours
4. Remove the masking tape and wet the sandpaper before use. First use the red sandpaper with the white block as a support to sand the damaged surface in small circles. Then repeat the same process using the grey sandpaper.
5. For an improved final finish, give the entire surface a light once-over with a green scourer (Scotch Brite or similar).


**The Repair Kit has an expiration date of 3 months from the date on the package.*

ATTENTION:

There may be slight variations in shade from the original colour. Repair Kits should be stored in a cool, dry place and out of the reach of children.

CERTIFIED



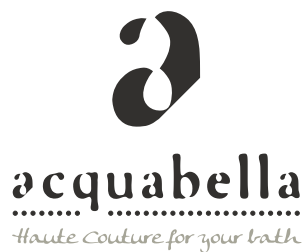

ENGINEERED STONE GROUP LLC

655 Peachtree Industrial Blvd.

Bldg 200 – Suite 210

Sugar Hill, GA 30518

+1 888-588-5047

acquabella@acquabella.us • www.acquabella.us

GLOBAL HEADQUARTERS

Polígono Industrial Belcaire

Calle C, Parcela 1201

CP 12600 La Vall d'Uixó

Castellón (España)

The colors, information, weight and descriptions contained in this catalogue are used as a guidance. The appearance of the material can vary slightly from that shown in photography. Acquabella reserves the right to make product modifications considered appropriate without prior notice. Any reproduction, partial or total not authorised remains totally prohibited. The above mentioned violation will be prosecuted by the law. E&EO